


A350 MANUEL SECURITE SAUVETAGE

EMERGENCY AND MEDICAL EQUIPMENT EMERGENCY EQUIPMENT

DESCRIPTION AND OPERATION

Megaphone

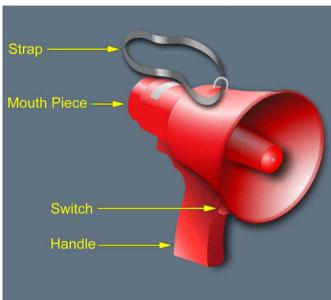

ADDITIONAL INFORMATION

The on-board megaphones are powered by 8 alkaline batteries (AA-size) each.

HOW TO USE THE MEGAPHONE

1. Hold the megaphone to the mouth.

Note: Do not place the hand around the mouthpiece.

2. Direct the megaphone towards the passengers.

	DO NOT OPERATE THE MEGAPHONE CLOSE TO SOMEONE'S EARS.
	AMPLIFIED SOUND OR HOWLING CAN CAUSE DAMAGE TO THE INNER
	EAR.

3. Press the switch of the handle and speak slowly in a loud and clear voice.

GENERAL

An emergency escape hatch is installed in the cockpit.

Information about the emergency escape hatch is available in the following section: